

VENT-AXIA SALES CENTRES

MIDLANDS 70 Albert Road, Stechford,
Birmingham B33 9AH.
Telephone: 0121 783 8601 Fax: 0121 784 7506.

SOUTH WEST 4 Dowry Square, Bristol BS8 4SS.
Telephone: 0117 927 7567 Fax: 0117 922 5631.

NORTH WEST Unit 2 Caledonia Way,
Stretford Motorway Est.
Barton Dock Road, Manchester M32 0ZH.
Telephone: 0161 865 8421 Fax: 0161 865 0098.

EASTERN Newton Road, Crawley,
West Sussex RH10 2JA.
Telephone: 01293 530202 Fax: 01293 565169.

SCOTLAND 12 Lambhill Quadrant,
Scotland Street Trading Estate,
Kinning Park, Glasgow G41 1SB.
Telephone: 0141 429 1166 Fax: 0141 429 6616.

YORKSHIRE 5 Dolly Lane, Leeds LS9 7TT.
Telephone: 0113 245 2985 Fax: 0113 242 4430.

LONDON Newton Road, Crawley,
West Sussex RH10 2JA.
Telephone: 0181 549 2271 Fax: 01293 565169.

SOUTH EAST Newton Road, Crawley,
West Sussex RH10 2JA.
Telephone: 01293 530202 Fax: 01293 565169.

NORTH EAST Newcastle upon Tyne
Tel: 0191 273 1128 Fax: 0191 226 0352

NORTHERN IRELAND 11 Sydenham Road,
Belfast BT3 9DH.
Telephone: 01232 455528 Fax: 01232 452529.

REPUBLIC OF IRELAND
Vent-Axia Ventilation Ltd. 921 Western
Industrial Estate, Naas Road, Dublin 12.
Telephone: 01 450 4133 Fax: 01 450 4570.

Internet site at: <http://www.vent-axia.co.uk> email: fan@mail.vent-axia.co.uk

The Vent-Axia Guarantee

Applicable only to products installed and used in the United Kingdom. For details of guarantee outside the United Kingdom contact your local supplier.

Vent-Axia guarantees its products for two years from the date of purchase against faulty material or workmanship. In the event of any part being found to be defective, the product will be repaired, or at the Company's option replaced, without charge, provided that the product:

1. has been installed and used in accordance with the instructions given with each unit.
2. has not been connected to an unsuitable electricity supply. (The correct electricity supply voltage is shown on the product rating label attached to the unit.)
3. has not been subjected to misuse, neglect or damage.
4. has not been modified or repaired by any person not authorised by the company.

IF CLAIMING UNDER TERMS OF GUARANTEE

please return the complete product, carriage paid to your original supplier or nearest Vent-Axia Centre, by post or personal visit. Please ensure that it is adequately packed and accompanied by a letter clearly marked "Guarantee Claim" stating the nature of the fault and providing evidence of date and source of purchase.

The guarantee is offered to you as an extra benefit, and does not affect your legal rights.

As part of the policy of continuous product improvement Vent-Axia reserves the right to alter specifications without notice.

Vent-Axia®

HEAD OFFICE/EXPORT SALES Fleming Way, Crawley, West Sussex RH10 2NN
Tel: 01293 526062 Fax: 01293 551188




recycled paper

463110 F

0697

Vent-Axia®

Heat Recovery Ventilation Controller

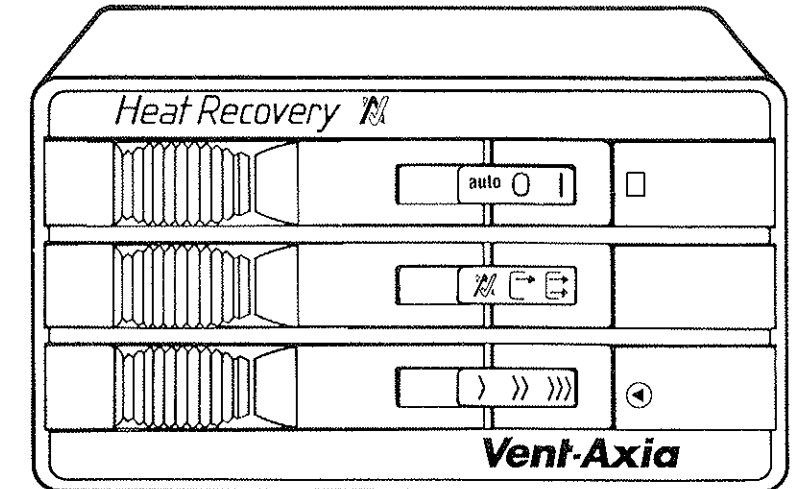

Fitting & Wiring Instructions

CE

Fitting & Wiring Instructions

IMPORTANT

PLEASE READ ALL INSTRUCTIONS CAREFULLY **BEFORE** COMMENCING INSTALLATION.

1. It is recommended that this controller is installed by a qualified electrician.
2. The installation and wiring must comply with current IEE Regulations, (BS 7671) or the appropriate standards in your country.
3. This controller is not suitable for use in rooms containing a fixed bath or shower.
4. When used with a Heat Recovery Ventilation unit installed in a room containing a fuel burning appliance, ensure that air replacement is adequate for both the fan(s) and the fuel burning appliance.
5. This controller has a maximum rating of 600W @ 20°C (400W @ 40°C) on a 220-240V ~ 50Hz supply. A maximum of 2 Vent-Axia Heat Recovery Ventilation units may be connected to one controller.

Description

This controller has been designed specifically for use with Vent-Axia Heat Recovery Ventilation units but may also be used to control other equivalent loads up to the stated rating. Facilities include on/off, heat recovery intake and extract, high and low volume extract, variable speed control and automatic control via electro-mechanical ON/OFF switched sensor, e.g. thermostat, timer relay, etc.

Location

The controller may be sited in any convenient position that is unaffected by direct heat sources such as radiators, boilers, etc. Do not site the controller where it may be subject to water spray, condensation, damp or wet conditions. If intended for use in abnormal ambient conditions, contact your local Vent-Axia Sales Centre.

Fitting

Unscrew the two screws and remove the lid/switch from the mounting box. The mounting box may be fixed to most single or double gang recessed metal outlet boxes or alternatively fixed direct to the wall for surface cable entry. When using surface wiring that is not being contained in conduit, the supply and output cables must be securely clipped to the mounting surface, close to the controller.

Wiring

WARNING: THIS APPLIANCE MUST BE EARTHED

Ensure that mains supply is isolated before proceeding with the wiring. The installation must be provided with a double-pole isolator switch, having a contact separation not less than 3mm, and be protected with a 5 amp fuse (UK).

Make electrical connections as shown in the wiring diagram to obtain all available functions of the controller.

For AUTOMATIC REMOTE SWITCHING (if required) see also relevant sensor wiring instructions.

Note:

Only mechanical or electro-mechanical switched sensors should be used.


Connect sensor switch leads to L4 and L5 in the connector block 2.

When slide switch is in auto position marked **auto**, automatic switching from sensor/switch (if fitted) will be obtained. Ensure sensor switch is adequately rated for the switched load.

Note:

Where more than one Heat Recovery Ventilation unit is to be used, the additional unit must be wired in parallel using suitable junction boxes (not supplied).

SLIDE SWITCH FUNCTIONS

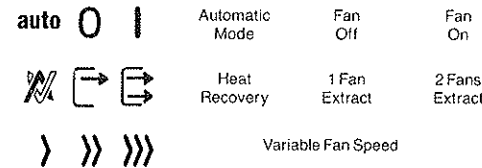


Replace the lid/switch into the mounting box. Do not over-tighten the captive screws.

MINIMUM SPEED ADJUSTMENT


A minimum speed adjuster is located on the front of the controller and is exposed when the bottom slide bar is moved fully to the left. This adjuster is used to vary the lowest speed setting if the fans do not revolve when the controller is set to minimum speed. Using a small screwdriver, turn the adjuster clockwise to increase the minimum speed setting. After any adjustment, make sure the fans will start from a stationary condition by using the ON/OFF switch with the variable speed slide knob set fully to the left (minimum speed).

For on/off control by remote thermostat, humidistat, timer etc., use terminals L4 and L5. Units will operate at preset speed/mode on make

- 1 Main connector block
- 2 Sensor connector block
- 3 Earth connector block
- 4 Fuse (5 AMP)
- 5 Mains supply
- 6 Sensor switch
- 7 Heat Recovery Controller
- 8 Heat Recovery unit terminal block
- 9 5-core 0.75mm² cable

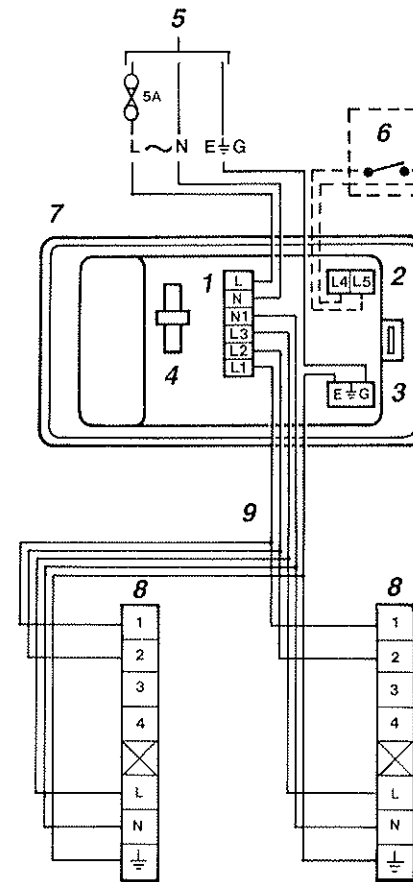

CURRENT HEAT RECOVERY VENTILATION UNIT TERMINAL BLOCKS AS FITTED TO HR500 MKIII AND HR500X (STOCK REFS 14101010B AND 14101070)

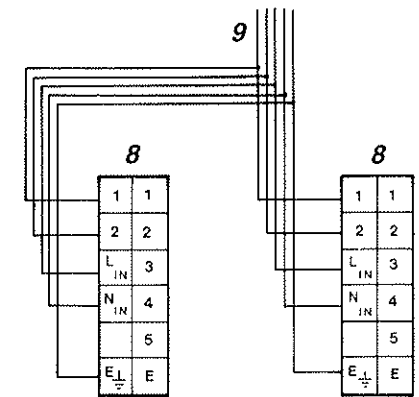

EARLIER HEAT RECOVERY VENTILATION UNIT TERMINAL BLOCKS AS FITTED TO HR500 MKI AND MKII (STOCK REFS 14101010 AND 14101010A)